

J-Series Heavty Duty Lever Lock Installation Instructions

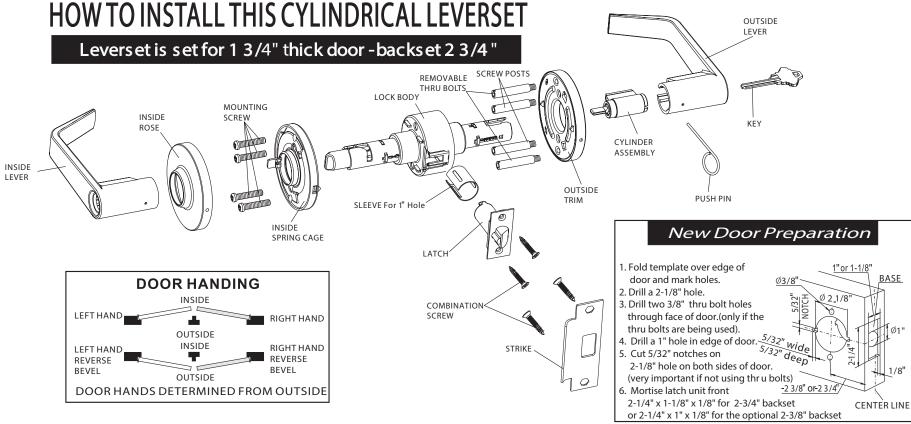




DISASSEMBLE INSIDE LEVER

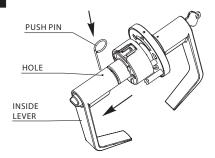


1A: Insert push pin into hole to depress catch and remove the lever.


2 INSTALL LEVERSET TO DOOR

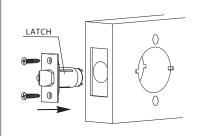

2A: Insert latchbolt and secure with combination screws.

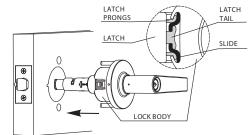


2B: Place lock body into position. Makesure that latch prongsengage chassis inhousing, and slide engages latch tail.

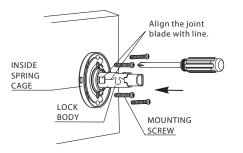


2C:Install inside springcage, Screws should be hand tightened all the way down with a screwdriver.


Not to scale 1:1. Measurements are for reference only. Not a drilling template.

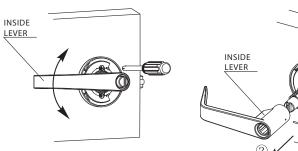


2D: Slide inside leveronto spindle and check to see if the rotation is smooth. Adjust the radial clearance between inside spring cage and inside leverif necessary.

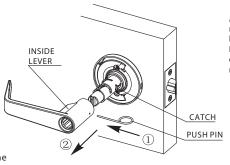

2E:Remove inside lever using pushpin.

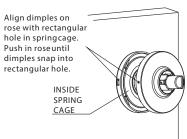


2F: Install inside rose and make sure inside rose and inside spring cage are tightened.

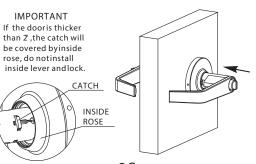


2G:Slide lever onto spindle.
Push lever completely into place.
(Pull on lever to make sure that catch is fully engaged).



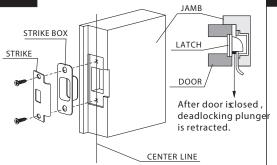


4


INSTRUCTIONS FOR REMOVING AN INSTALLED LOCK FROM THE DOOR

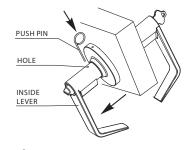

4A: Insert push pin into hole to depress catch and remove the lever.

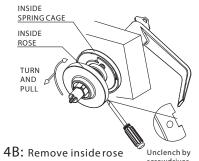


4B: Remove inside rose Unclench by by turning and pulling off.

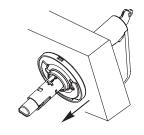

4C: Remove mounting screw with screwdriver and inside spring cage.

5


INSTRUCTIONS FOR ADJUSTING LOCK TO FIT DOOR THICKNESS OTHER THAN 1-3/4

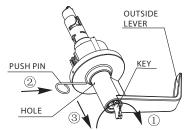


5A: Turn key 75° clockwise, insert push pin into hole in outside lever to depress catch. Remove the outside lever.




5B: Unscrew two screwposts in lock body by screwdriver.

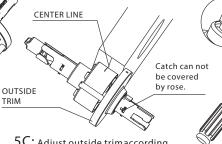

 5C: Adjust outside trimaccording to the doorthickness, make surethe lock body atboth sides is symmetrical.



 5D:Screw two posts back in sothey hold the outside rose tightly.



Correct keyway direction after assembling.

Turn back

position.

key to normal

5E: Turn key approximately 80° clockwise and push the lever all the way onto the spindle and then turn key back to normal position.