




Design Hardware™

www.DesignHardware.net

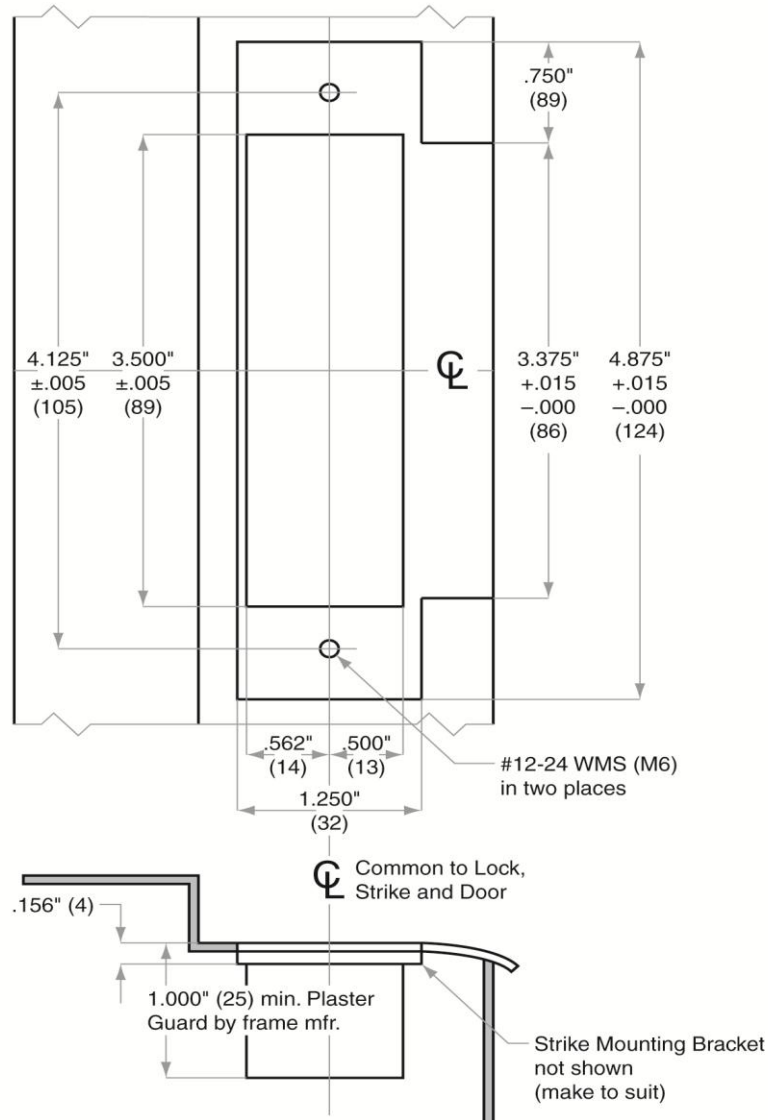

Note: Dimensions shown in brackets [ ] are in millimeters.

Strike location on frames must be adjusted for thickness of door silencers when used

<p>Template No.</p> <p>ASA.MTL</p>	<p><b>Design Hardware Frame Template</b></p> <p>4 7/8" ASA Strike</p>	
------------------------------------	---	--