




Design Hardware™
www.DesignHardware.net

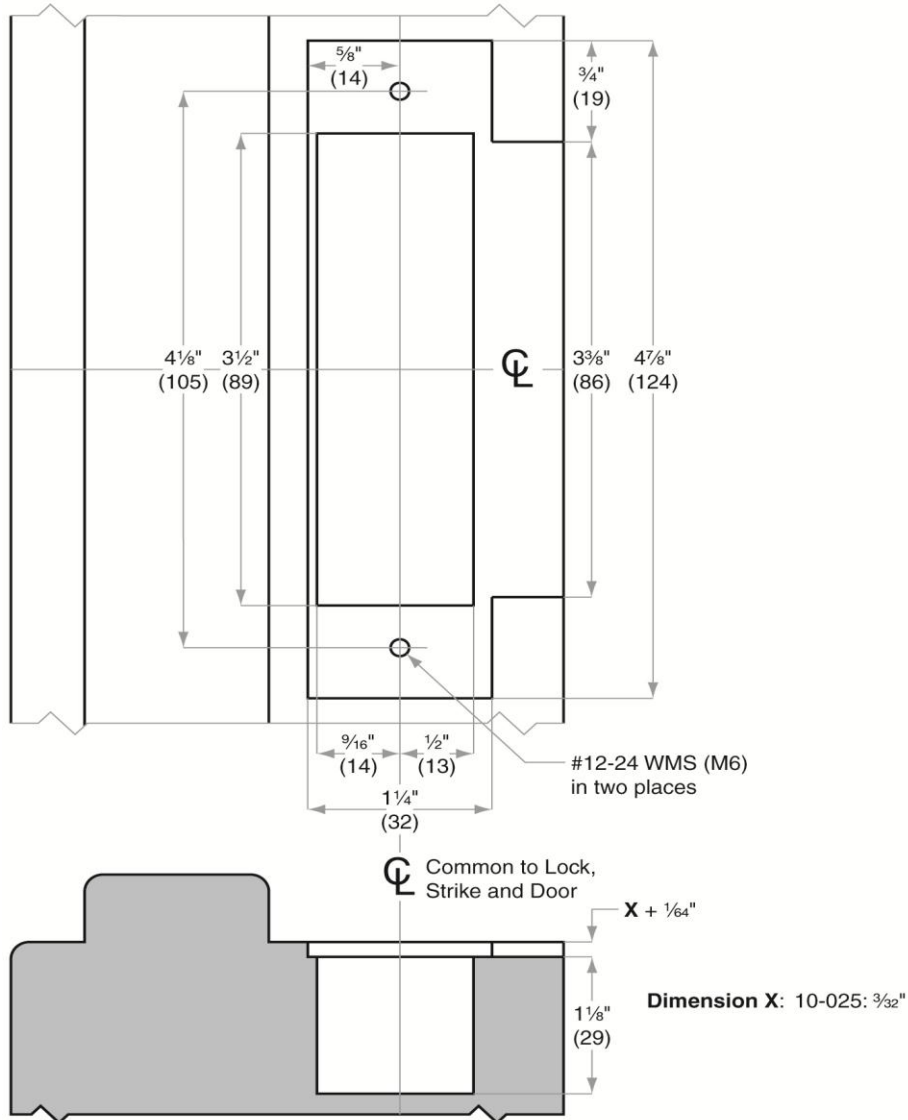

Note: Dimensions shown in brackets [] are in millimeters.

Strike location on frames must be adjusted for thickness of door silencers when used

Template No. ASA.WD	Design Hardware Wood Frame Template 4 7/8" ASA Strike	
----------------------------	---	--