



DG-EP Door Guard with Edge Protector Installation Instructions



Template NO:
19481

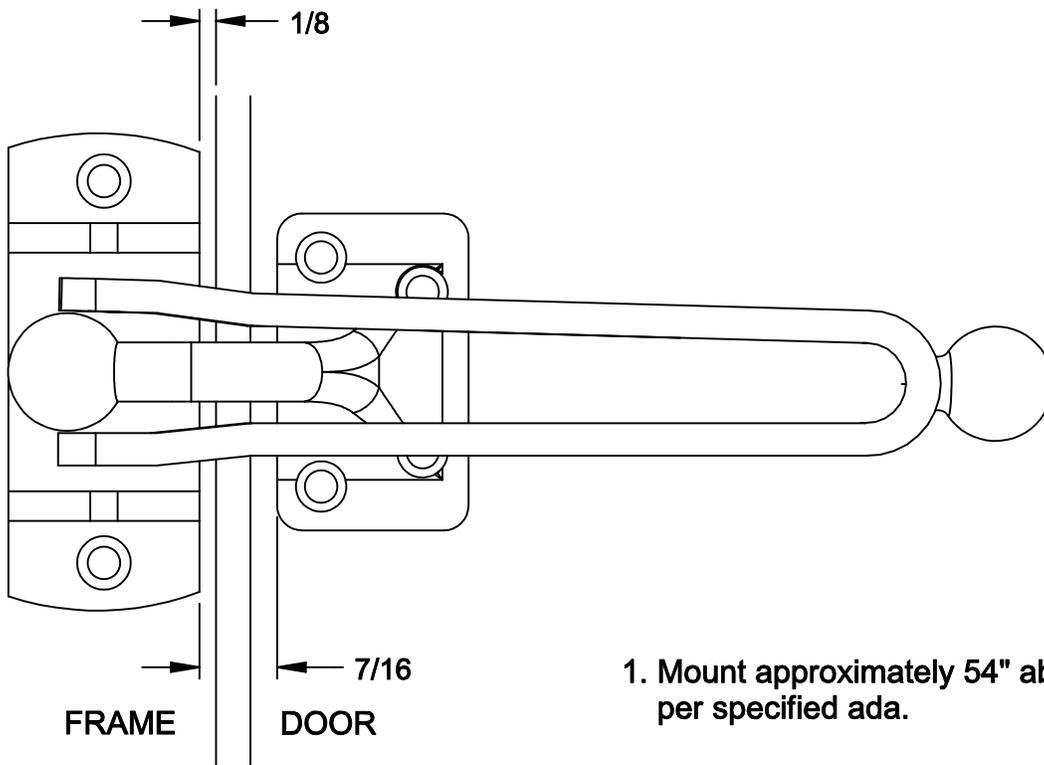

1. Mount approximately 54" above floor or per specified ada.
2. Mark and mount Arm Base to door frame. Note: Position base so that base edge is $1/8$ " from edge of frame.
3. Position and mount base on door $7/16$ " from edge of arm base.

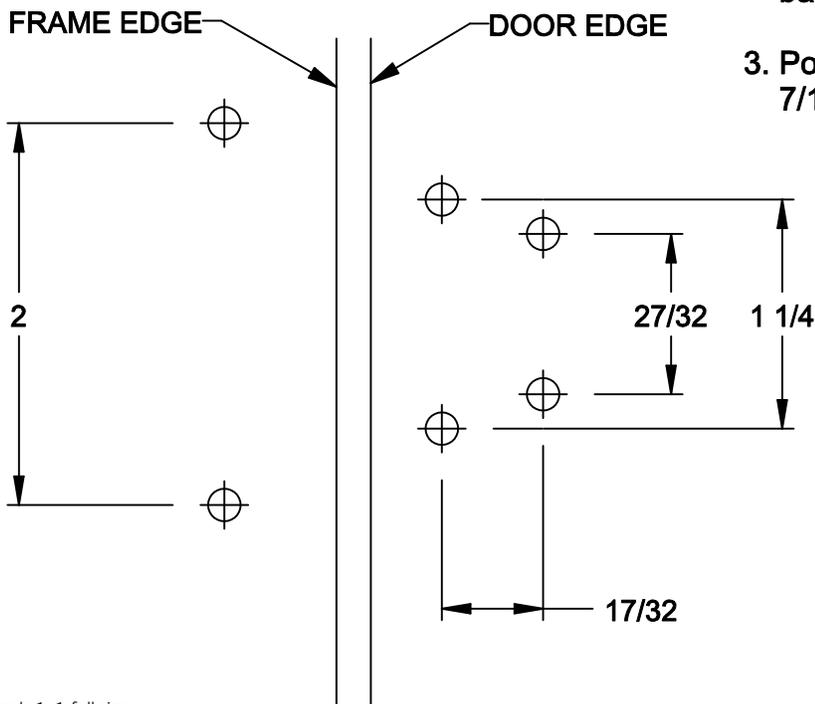

Template to scale 1 : 1, full size.

Always consult dormakaba's website for the latest instructions at designhardware.net or call 1-800-392-5209.

Design Hardware is a trademark of dormakaba USA Inc. ©2021 All rights reserved.

T92950_A