



UL-MFB-M Flush Bolts (Metal Doors) Installation Instructions



UL Manual Flush Bolt - (Metal Door) HOLLOW METAL DOOR & FRAME PREPARATION TEMPLATE

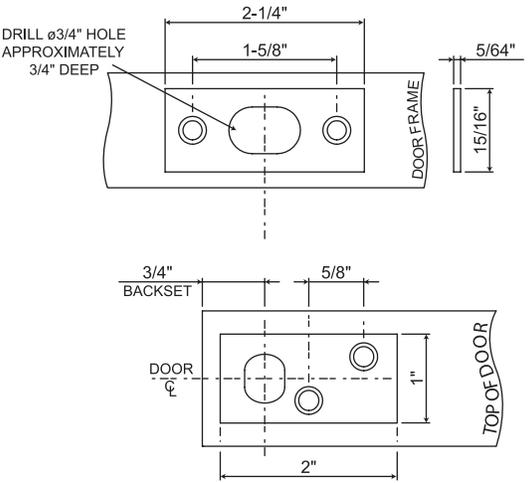

FASTENERS NOTE:
ALL SCREWS SUPPLIED ARE
#8-32 x 3/4" Combination
Thread Screws

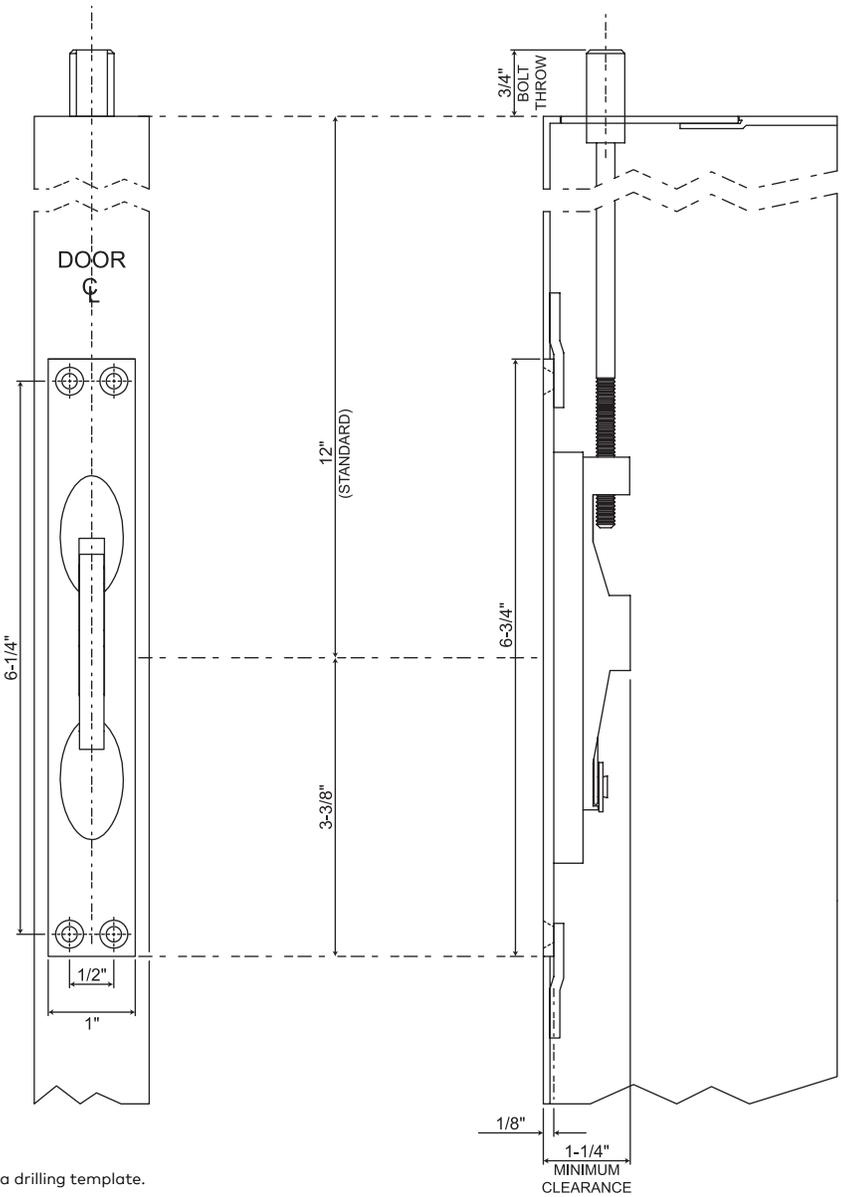

**DRAWING NOT
TO SCALE**

Not to scale 1:1. Measurements are for reference only. Not a drilling template.

Always consult dormakaba's website for the latest instructions at designhardware.net or call 1-800-392-5209.

Design Hardware is a trademark of dormakaba USA Inc. ©2021 All rights reserved.