


# UL-MFB-W Flush Bolts (Wooden Doors) Installation Instructions

## UL Manual Flush Bolt - (Wood Door) WOODEN DOOR & FRAME PREPARATION TEMPLATE

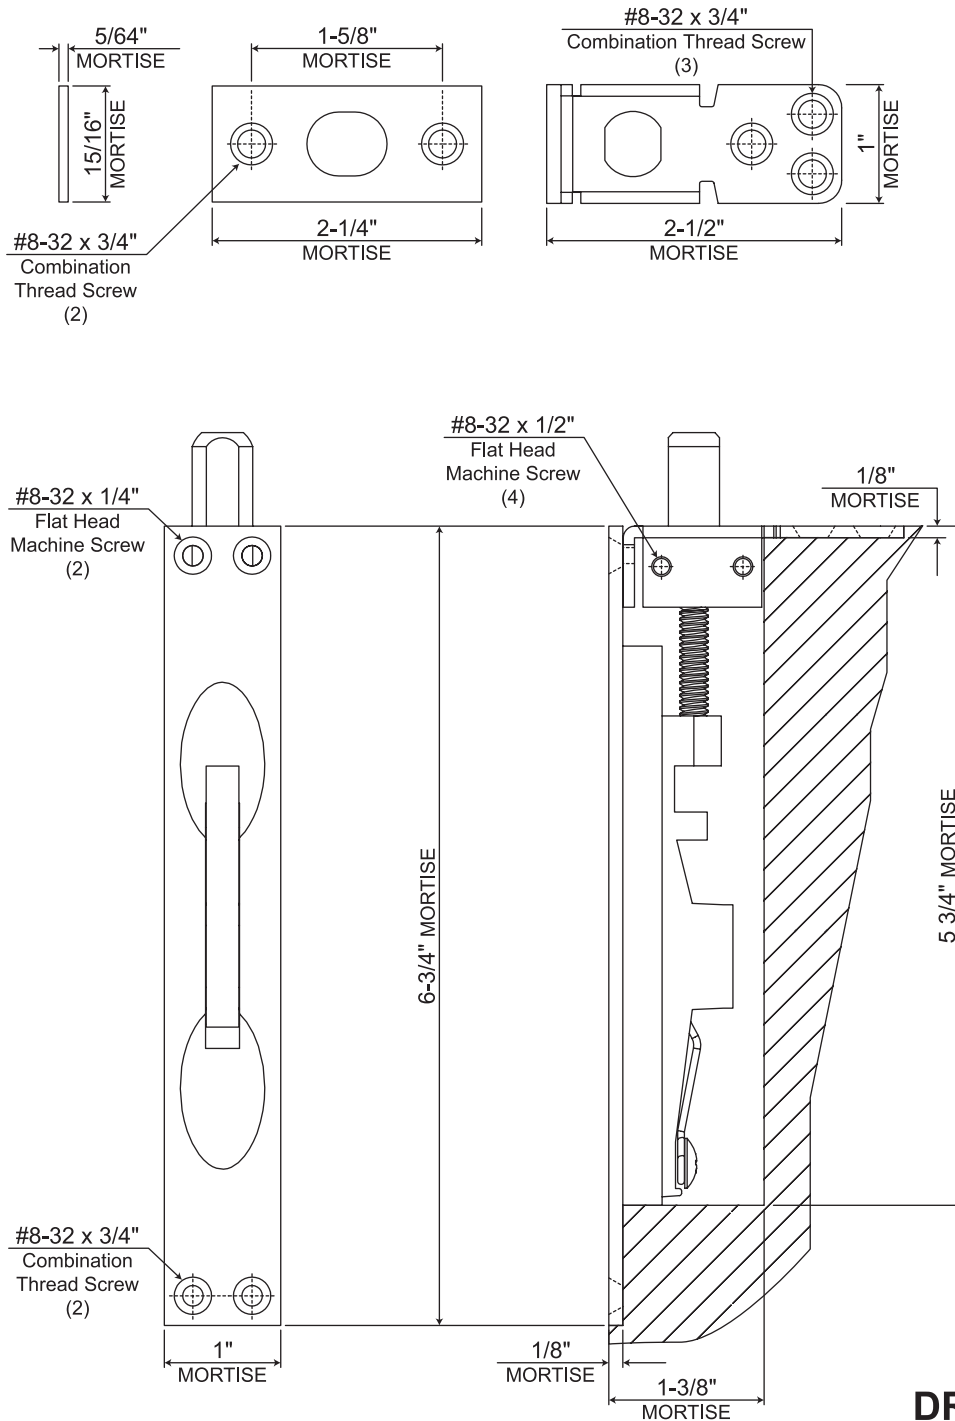

**DRAWING NOT  
TO SCALE**

Not to scale 1:1. Measurements are for reference only. Not a drilling template.

Always consult dormakaba's website for the latest instructions at [designhardware.net](http://designhardware.net) or call 1-800-392-5209.

Design Hardware is a trademark of dormakaba USA Inc. ©2021 All rights reserved.

T92954\_A