

# D1 Series Extra Heavy Duty Dead Bolt Lock Installation Instructions


## 1 MARK DOOR & BORE HOLES

**A:** Fold template on edge of door mark site 2-3/8" or 2-3/4" of holes.

**B:** Drill a 2-1/8" hole through door (from both sides to avoid damaging door).

**C:** Drill a 1" hole in door edge.


**D:** Cut out a 2-1/4"x1-1/8"x1/8" base.

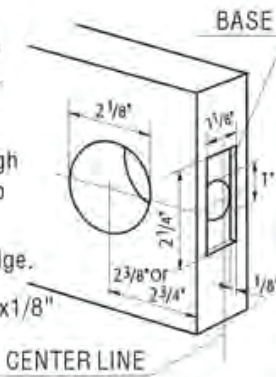

## 2 INSTALL LATCH

**A:** Install security shield.


**B:** Install deadbolt oriented with cam slot down.

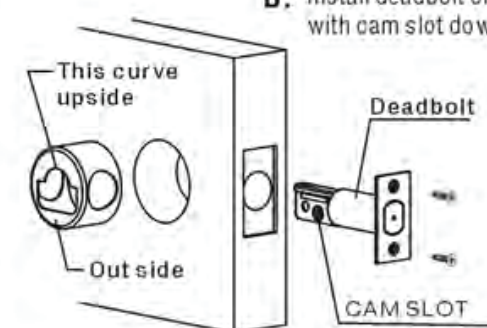

## 3 INSTALL OUTSIDE CYLINDER

**Single cylinder**

**Double cylinder**

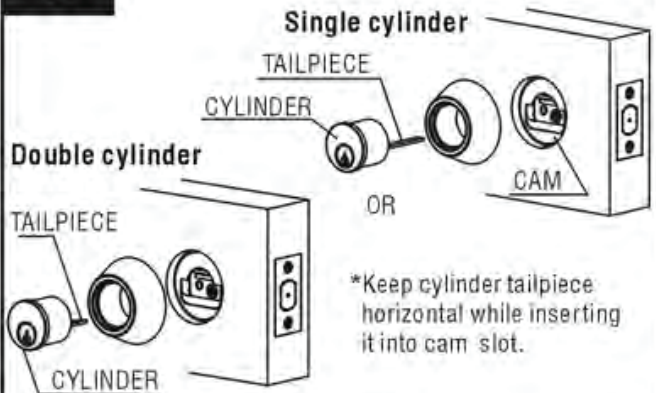


\*Keep cylinder tailpiece horizontal while inserting it into cam slot.

## 4 INSTALL INSIDE TRIM OR CYLINDER


**Single cylinder**

**Double cylinder**

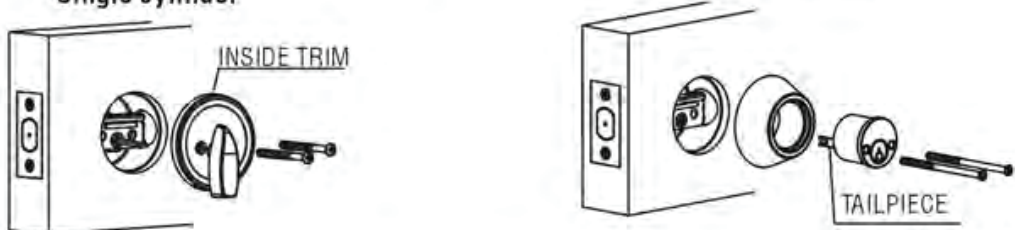

\*Keep cylinder tailpiece vertical while inserting it into cam slot.

## 5 INSTALL STRIKE

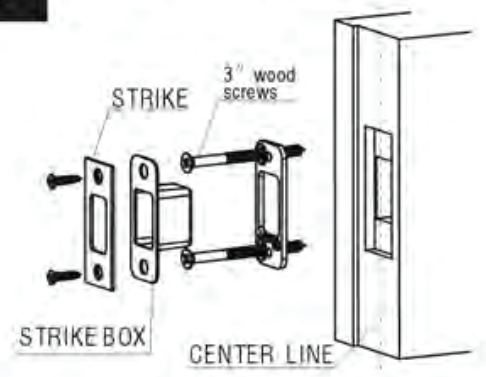

When finishing install, check operation of deadbolt by extending the deadbolt using the key and then removing the key, then retract the deadbolt using the key and then remove the key. Make sure tailpiece is inserted through slot correctly. if not adjust tailpiece rotation and reinstall trim and tailpiece.

Not to scale 1:1. Measurements are for reference only. Not a drilling template.