


D-Series Deadbolt Strike Template (Wood)

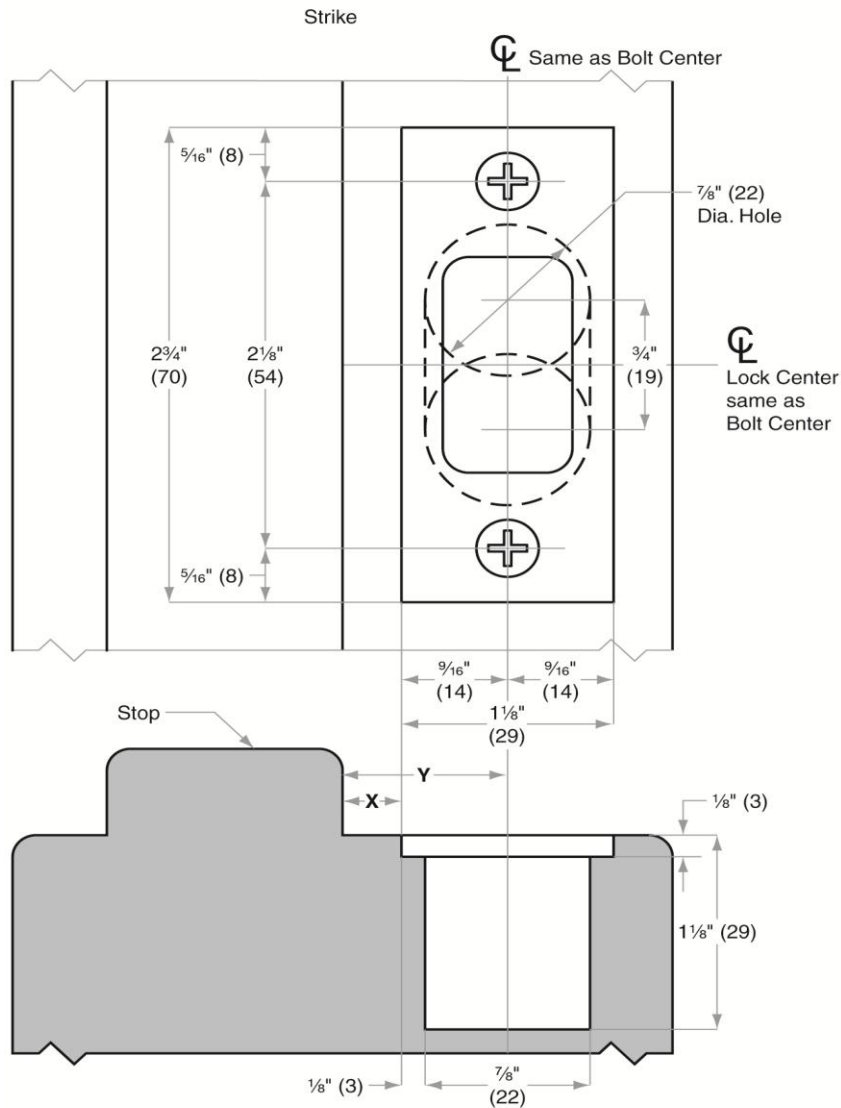

NOTE:

1. When strike/frame reinforcer is used, additional preparation is required: two Pilot Holes and 1/8" (3) deeper mortise
2. For use with 1" (25) throw deadbolt functions
3. Dimensions X and Y are variables dependent on door thickness
4. Strike location on frames must be adjusted for thickness of door silencers when used

<p>Template No. D12.WD</p>	<p>Design Hardware Frame Template</p> <p>D1 & D2 Deadbolt Strike Template</p>	<p>Functions</p> <p>All Functions</p> <p>Wood Frames</p>
--	---	--

Not to scale 1:1. Measurements are for reference only. Not a drilling template.