


## ASA 4 7/8" Strike Template (Wood)

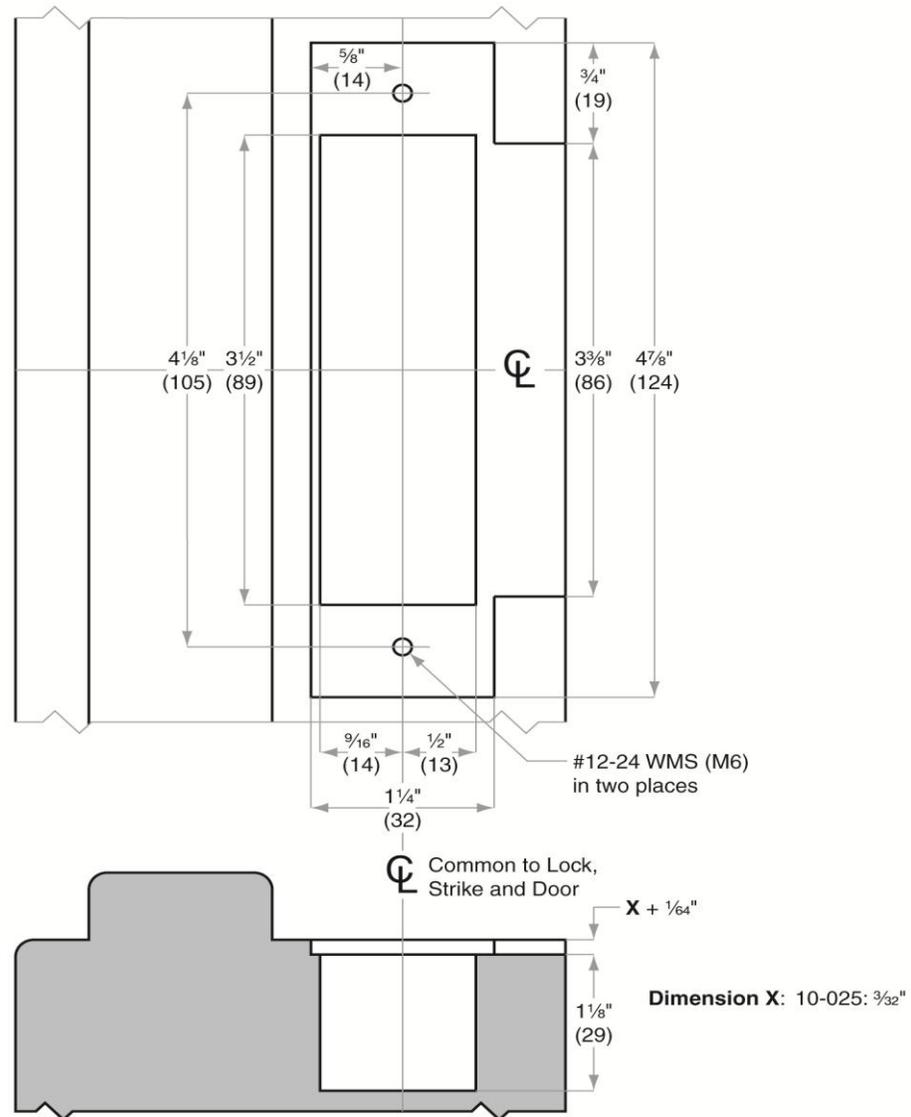

Note: Dimensions shown in brackets [ ] are in millimeters.

Strike location on frames must be adjusted for thickness of door silencers when used

<p>Template No.</p> <p><b>ASA.WD</b></p>	<p><b>Design Hardware Wood Frame Template</b></p> <p><b>4 7/8" ASA Strike</b></p>	
--	---	--

Not to scale 1:1. Measurements are for reference only. Not a drilling template.