

D2-Series Deadbolt Lock Installation Instructions


1 MARK DOOR & BORE HOLES

A: Fold template on edge of door mark site 2-3/8" or 2-3/4" of holes.

B: Drill a 2-1/8" hole through door (from both sides to avoid damaging door).


C: Drill a 1" hole in door edge.

D: Cut out a 2-1/4"x1-1/8"x1/8" base.

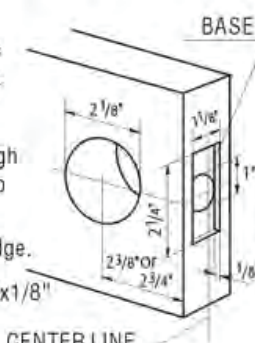

2 INSTALL LATCH

Install deadbolt oriented with cam slot down.



3 INSTALL OUTSIDE CYLINDER


Single cylinder

TAILPIECE
CYLINDER
OR
CAM

Double cylinder

TAILPIECE
CYLINDER

*Keep cylinder tailpiece horizontal while inserting it into cam slot.

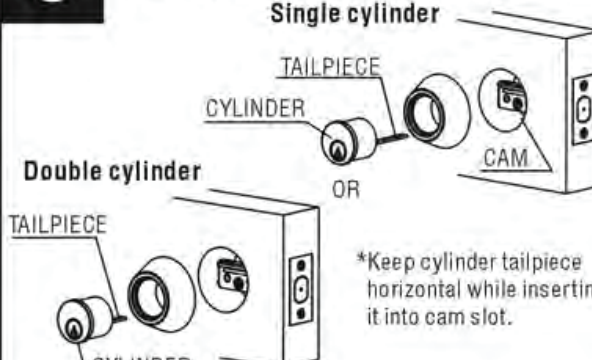

4 INSTALL INSIDE TRIM OR CYLINDER


Single cylinder

INSIDE TRIM

Double cylinder

TAILPIECE


*Keep cylinder tailpiece vertical while inserting it into cam slot.

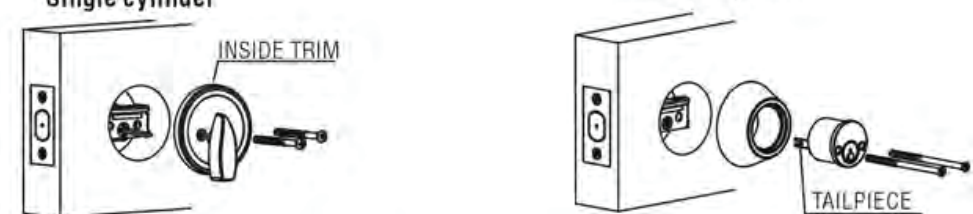

When finishing install, check operation of deadbolt by extending the deadbolt using the key and then removing the key, then retract the deadbolt using the key and then remove the key. Make sure tailpiece is inserted through slot correctly, if not adjust tailpiece rotation and reinstall trim and tailpiece.

5 INSTALL STRIKE

STRIKE
STRIKE BOX
CENTER LINE

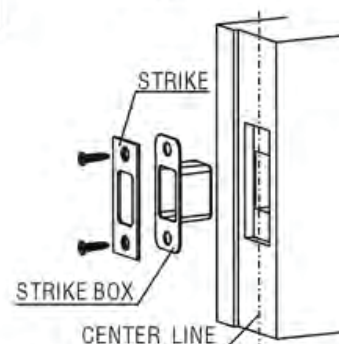

Not to scale 1:1. Measurements are for reference only. Not a drilling template.