


CYLINDER DOGGING KIT FOR 1000 SERIES


Step 1

Remove end cap ,old slide cover, and dogging device.

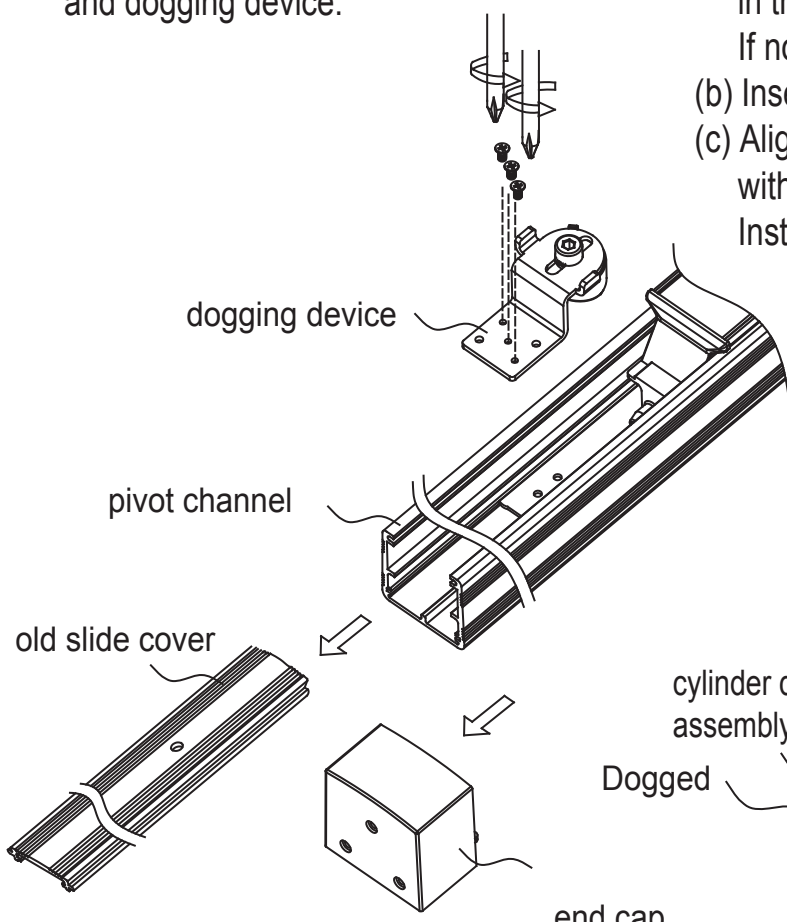


Step 2

- (a) Make sure cam of cylinder dogging assembly is in the "U" (Un-Dogged) position. If not , move the cam to the "U" position.
- (b) Insert cylinder dogging assembly into pivot channel.
- (c) Align the 3 screw holes on the cylinder dogging assembly with the 3 matching screw holes on the inside plate. Install the 3 screws and tighten until tight.

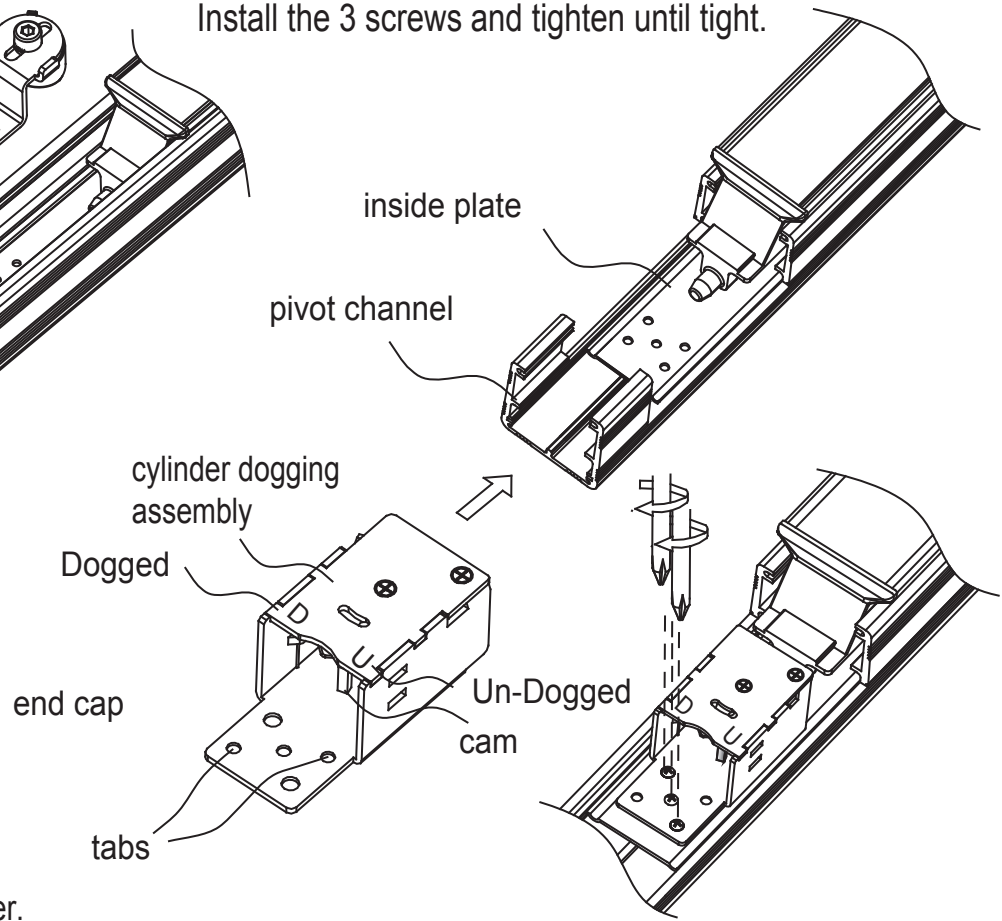


Step 3

- (a) Insert back plate into new slide cover.
- (b) Install cylinder collar onto the mortise cylinder and insert into new slide cover and back plate. Then, thread cylinder retaining ring onto cylinder until finger tight.
- (c) Insert new assembled slide cover into the pivot channel .Install end cap.

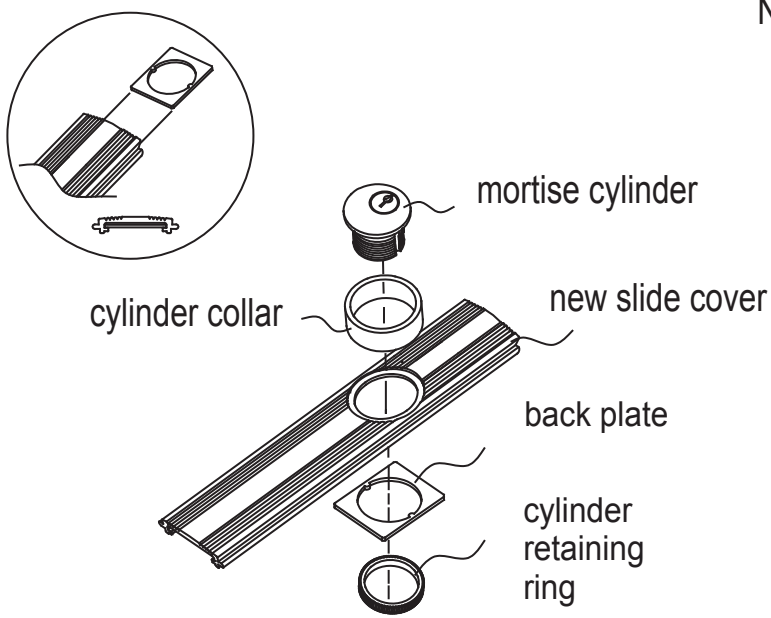

Note : plug direction downwards to head cover.

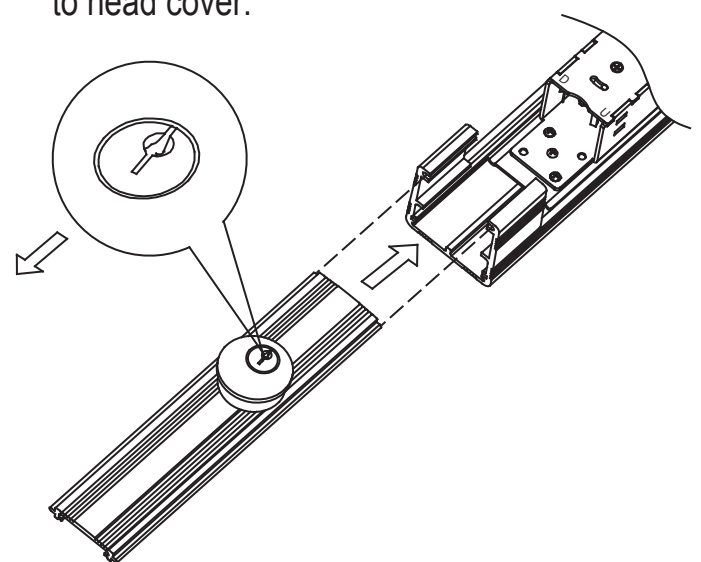


Step 4 Test Operation

(a) Dogging Exit Device :

Depress touchbar to retract latchbolt .

Insert and turn key 180° counter-clockwise to dog down touchbar and hold latchbolt in retracted position.

Turn key 180° clockwise to remove key.

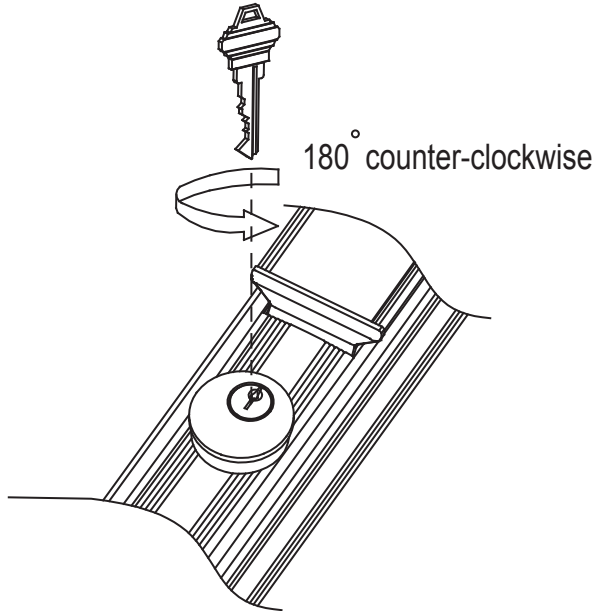


(b) Un – Dogging Exit Device :

Insert and turn key 180° clockwise until a click sound is heard.

Touchbar will spring up and latchbolt will spring out.

Turn key 180° counter-clockwise and remove key.

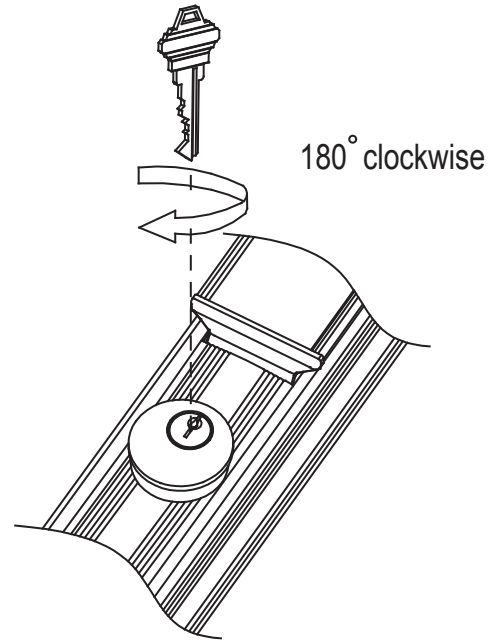

(c) Install end cap.

